

**WALTHER
STRONG®**



**IF YOU'RE A PROFESSIONAL
YOU'RE USING WALTHER STRONG**



**THE PLASTERERS EVERYDAY SCRIM
ELIMINATES THE NEED FOR PRE-PLASTERING**


AVAILABLE IN STORE OR ONLINE



1 - Prepare Surface [remove all debris & dust]



3 - Press Firmly [apply firm pressure along tape]

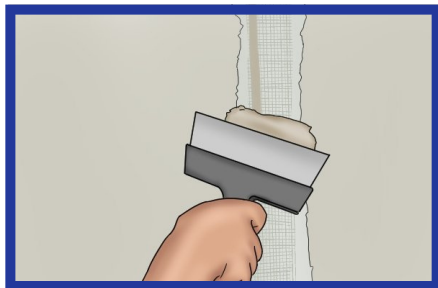

2 - Apply Tape [apply along centre of joint]

4 - Apply Joist Compound [as soon as possible after applying tape]



50MMX90M
TP-SCRIMWHT50X90PR



75MMX90M
TP-SCRIMWHT75X90PR



100MMX90M
TP-SCRIMWHT100X90PR

Professional Plasterers Scrim For Drywall, Plaster, Walls & Ceilings

- Prevents cracks
- High strength adhesive
- Medium duty scrim
- Stays put
- Easy release
- Eliminates the need for pre-plastering