

skyVac™ SkyVac 78 Internal 8 Pole Package



SkyVac Assembly



Always use the filter to protect the Motor

The drum cartridge must be kept in place at all times. Dust & debris will collect inside the bin. alternatively fit filter bag with drum filter to collect debris inside the bag this will also give ultra fine filtration

KEEP FILTER CLEAN


If using SkyVac as a wet pick up vac. Remove both cartridge and bag filters. Consult your hand book for additional guidance notes




Filter Bag



Push the
flexi
hose vac
cuff into
vac port

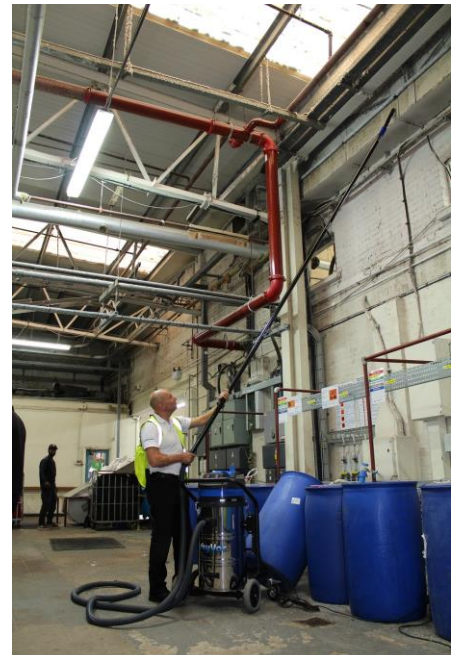

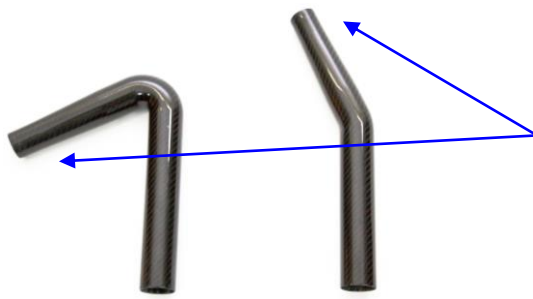

Insert the brush attachments onto the end of your chosen rigid carbon fibre tool holder



Connect poles together to the desired height. Select your tool holder and fit into suction pole then select your brush attachment and fit onto tool holder.



Fit anti-static connector into flexi hose cuff

Fit anti-static connector onto base suction pole



Select end tool to suit application

GOOD PRACTISE

Don't

Force the suction pole joints together.
Ensure the joints are free from dust and grit before putting together. Wipe the joints with a damp cloth. Grit can lock the joints up!

Do's

Occasionally spray the carbon fibre joints with Silicone Spray
Keep filters clean in your vacuum to keep retain suction power
When connecting poles together ensure they are free from grit and debris to prevent premature wear.

See your dealer for spare dust bags and specialist end tool not included in the standard kit